

## **Auto Lock Belt End Replacement**

**6** 877 97 7657

www.QueueSolutions.com



Slide the pin of the retaining clip into the belt loop.



Use a screwdriver or similar tool to push the retaining clip into its seat, listen for the click to tell that the clip is correctly fastened.