

BELT END REPLACEMENT

INSTRUCTIONS



Belt End



Spindle & Lock Tab



Cap



Flathead Screwdriver
(not supplied)

Removing the Belt End



1 Pull out approximately 3ft of belt and tie in a knot leaving room to remove the belt end




2 Hold the belt end with the bottom side facing up and insert the screwdriver between the lock tab and the belt end, twist and remove the lock tab.



3 Pull the spindle out from the opposite end and remove the belt from the belt end.

Inserting the Replacement Parts

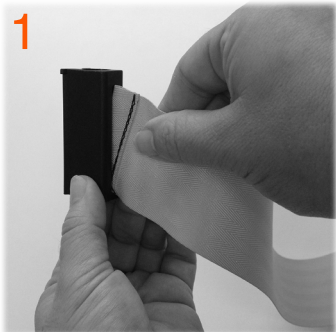

1 Insert the belt loop into the opening of the belt end, making sure to keep the large hole on the belt end facing up.



2 Insert the spindle, which will already have the lock tab attached, through the small hole in the bottom of the belt end and pass it through the sewn loop in the belt.

IMPORTANT: If you have difficulty pushing the spindle through the belt loop, gently twist the spindle while pushing.



3 Fit the cap to the end of the spindle and fix in place by pressing down with your thumb while holding the lock tab in place.