



2 X Magnets with Bolts and Nuts attached



Phillips Head Screw Driver (not supplied)

1 Press on the bolt head to push the nut away from the magnet. This creates the gap between the nut and magnet that allows the nut to slide into the belt end slot.



2 Line up the nut with the opening at the bottom of the belt end and slide it up the slot until the magnet is positioned at the top of the belt end.



3 Fit the second magnet and position at the bottom of the belt end.



4 Using a Phillips screw driver tighten the screws to lock the magnets into place

