



4 X Magnets with Bolts & Nuts



Flat Head Screwdriver (not supplied)



Phillips Head Screw Driver (not supplied)



7mm Nut Driver (recommended)

## Cap Removal



Insert a flat head screw driver or similar tool between the cap and housing and twist to release the lock tabs from the catch on each side.



Slide the cap backwards to remove.

## Magnet Fitting



Remove nut from bolt and place bolt through the mounting hole in the housing.



Secure the nut using a 7mm nut driver and place on the end of the bolt.



Tighten bolt onto the nut using a Phillips screw driver and repeat for the remaining three magnets.

## Cap Fitting



Slide the cap on by using a downwards motion.



Snap the locking tabs in place. If necessary, press in from the sides to locate the tabs properly.

**NOTE: A nut driver is recommended for ease of use but is not essential, the nut can be fitted by hand.**