

# Post Panel Insert Change Instructions

STEP

1



Unscrew the studs in the top collars and remove the collars from the posts on each side of the frame.

STEP

2



Pivot the panel to expose the screws on the sides of the frame near the top

Remove the screws from both sides of the frame

STEP


3



Remove the top of the frame

STEP

4

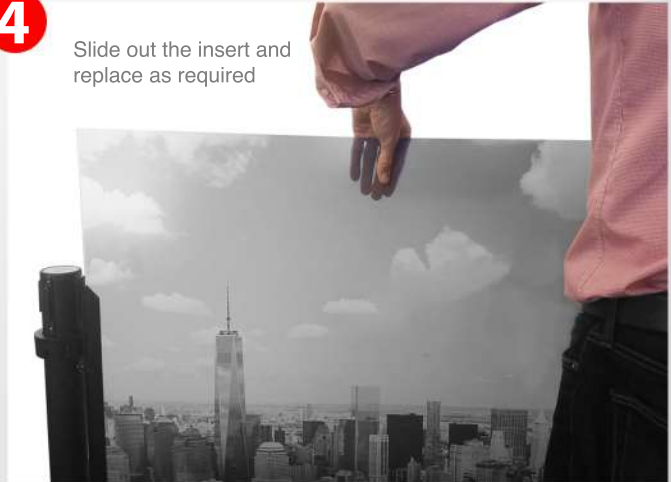

Slide out the insert and replace as required

STEP


5



Fit the frame top and replace the two side screws

STEP

6

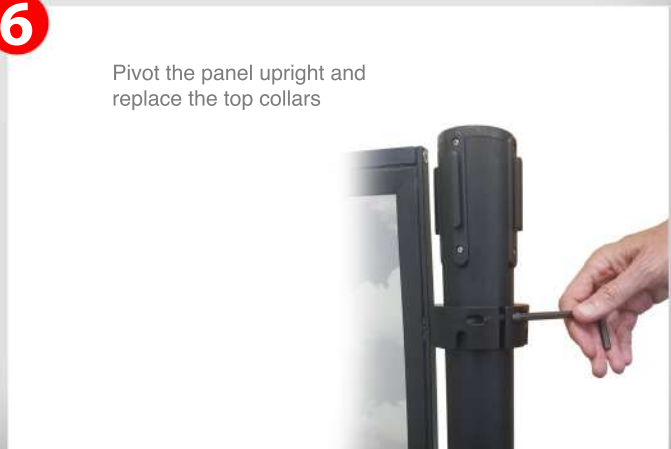

Pivot the panel upright and replace the top collars



HINT

If changing the panel insert by yourself it may be easier to remove the frame from the bottom collars and lean it against a wall to complete steps 3 - 6.