

Roller Replacement Instructions.



Roller Assembly



Phillips Screwdriver (not supplied)

1

Remove the two screws securing the roller assembly.



2

Detach the Roller Assembly.



3

Position the new Roller Assembly so that the screw holes in the assembly align with the holes in the stanchion base.



4

Position and tighten each of the two screw. Note: Ensure the screws are tight (use of an electric drill is recommended) otherwise the screws may loosen with usage.

