

WALLMASTER BELT CASSETTE REPLACEMENT INSTRUCTIONS




WallMaster 300
2.5" Dia. Replacement Cassette



WallMaster 400
3" Dia. Replacement Cassette



Phillips Screwdriver
(not supplied)

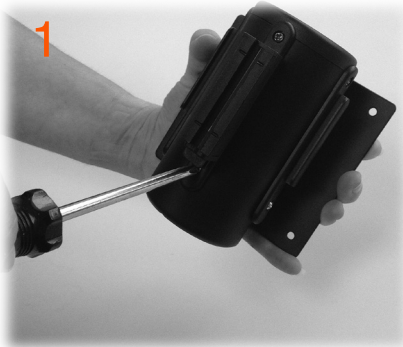

1
Loosen the three screws securing the cassette into the housing



2
Slide the cassette out of the housing



3
Loosen the lower screws slightly on the replacement cassette but take care not to remove them completely otherwise the internal spring will unwind and the belt will not retract



4
Fit the replacement cassette into the slots in the housing



5
Slide the cassette all the way down in the housing



6
Tighten the screws securing the cassette into the housing
Note: Do not over tighten as this may affect the belt retraction