

Housing



Caps x 2



Flathead Screwdriver  
(not supplied)

### Fitting




Slide the cap on by using a downwards motion




Snap the locking tabs in place. If necessary press in from the sides to locate the tabs properly



### Removal

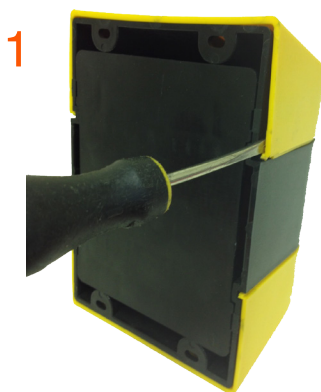

Insert screwdriver or other implement between the cap and housing and twist to release the lock tabs from the catch on each side

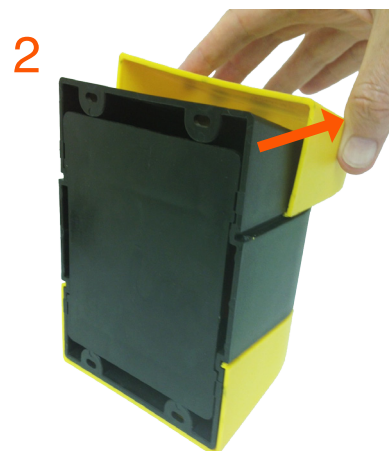

Slide the cap backwards to remove