

SkyPro 1500 Assembly




5

Slide the handle into the groove facing the rear of the base. Position approximately ¼ "/6mm from the post top and tighten using the Allen key supplied.



6

Take one belt unit and insert its runner into a post groove, slide to the bottom of the post. Repeat with the second belt unit.

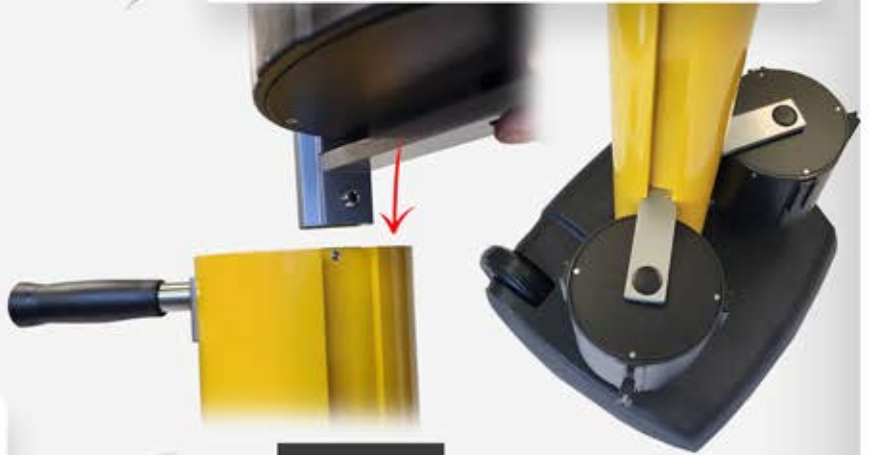

7

Replace the cap and tighten the three grub screws using the mini screwdriver.



HINT

The Allen screw protruding on the runner is at the bottom of the belt unit.



8

Slide one belt unit up the groove to the top of the post and hold in place while tightening the allen screw. Repeat with the second belt unit. Make sure the allen screws are fully tightened.



9

OPTIONAL:

Place the light on the top of the post if required, it is magnetic and does not require attachment.



HINT

The On/Off switch for the light is on the underside of the light. The light is solar powered and does not have batteries.

